

Front of the machine 前





Back of the machine 后

Machine side 侧面





机器内有USB数据线(连接电脑),从这个孔穿出来。

There is a USB data cable (connected to the computer) inside the machine, which comes out through this hole.


Interface接口

water in

water out

water protection



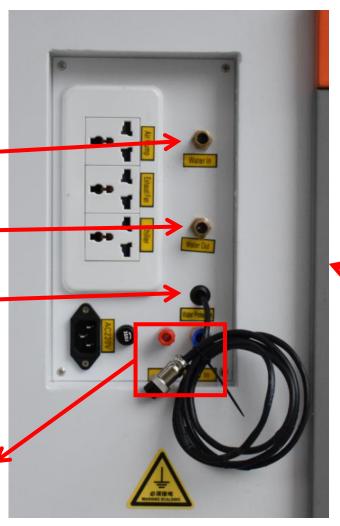




如何连接?

How to connect?

注意:冷却水管不能接错,会影响冷却效果与系统报警。 Note: The cooling water pipe cannot be connected incorrectly, which will affect the cooling effect and

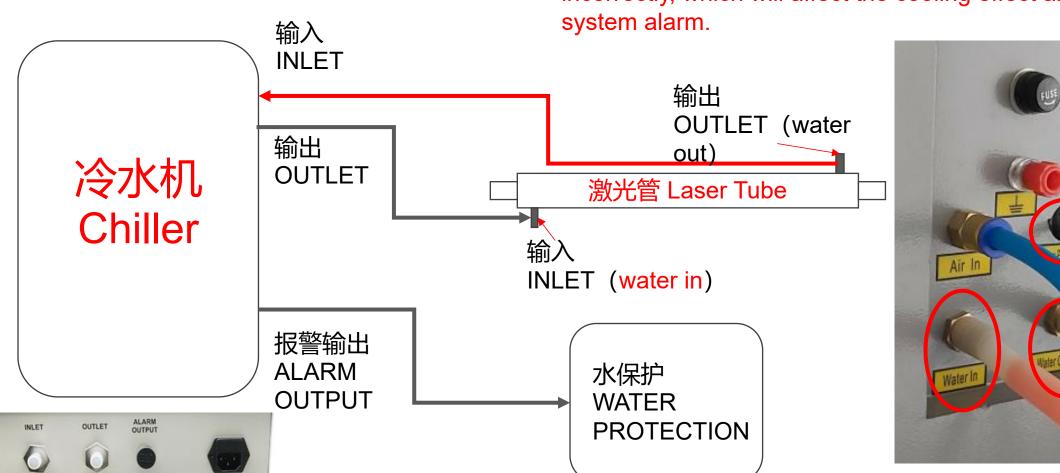



Platform平台


1300 x 900mm working frame with knife blade countertop, Suitable for cutting acrylic and density plate.

1300*900mm的工作幅面, 搭配刀条台面,适合于切 割亚克力与密度板等硬质 的中小型板材。



Elevating Platform升降平台


Double Motor drive, improve the stability of lifting 双电机带动,提高升降的平稳性

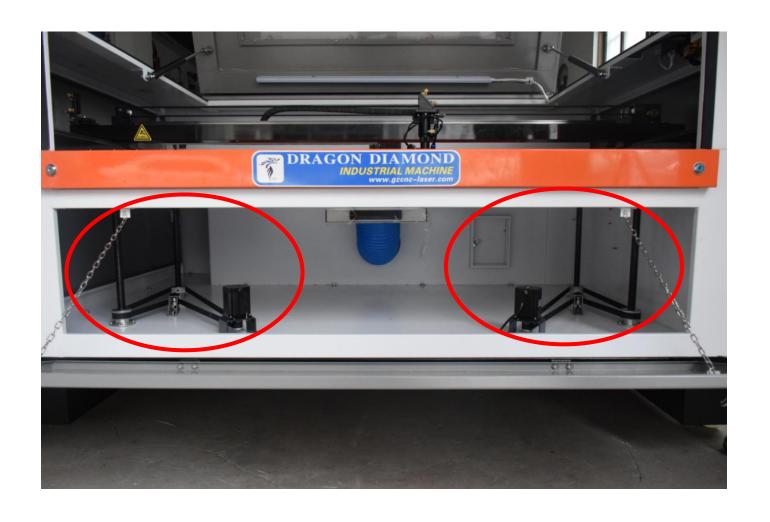

/

AutoFocus自动寻焦

See for details in AutoFocus. PDF

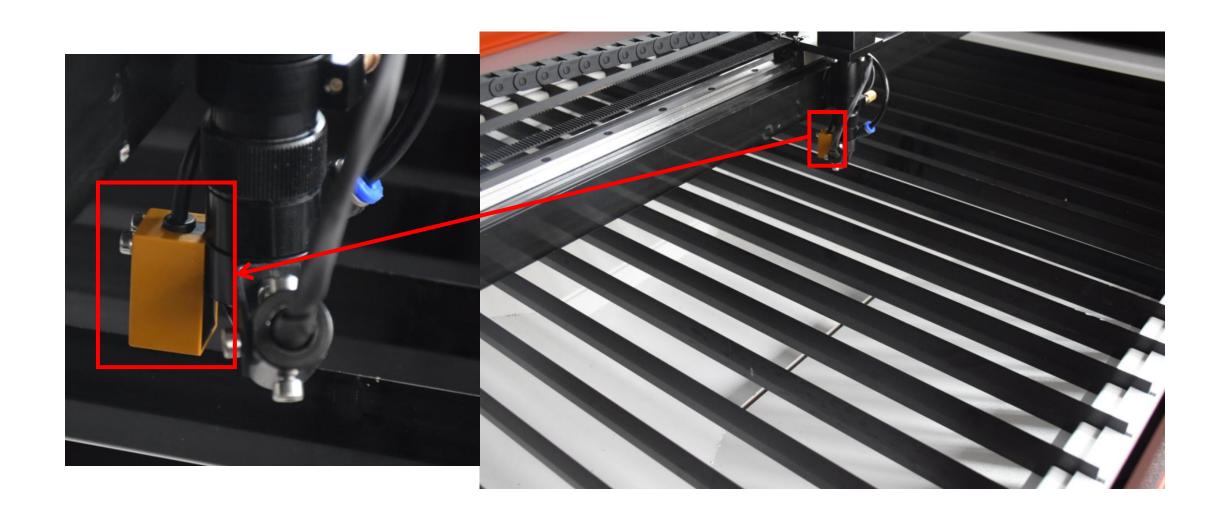


Switch开关



Displays the current triggered by the laser tube, and a knob on the side adjusts the amount of current triggered

显示激光管触发的电流 旁边的旋钮是调节触发电流 大小

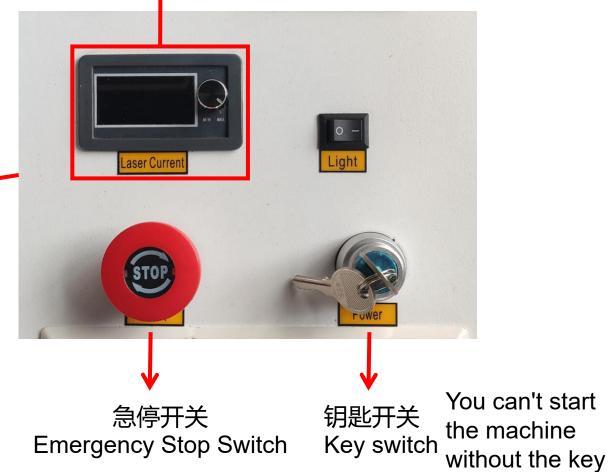

Faceplate面板





Set up the starting point of machining 设置加工开始点

Border of a figure 加工图形的边框



